

Distributed by:




TESTERSANDTOOLS.COM

Trust Experience Reliability

sales@testersandtools.com

Tel: 602-795-4033, Fax: 602-795-4624

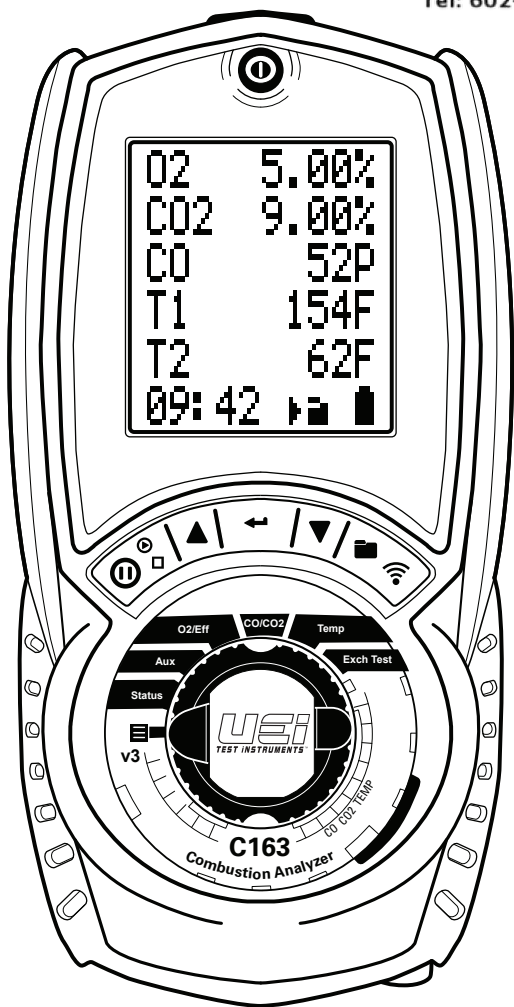

— BACKED BY —

UEI

SERVICE+

10

YEAR
WARRANTY

8



HR
SERVICE

ups
FREE
SHIPPING


1-800-547-5740 • Fax: (503) 643-6322

www.ueitest.com • Email: info@ueitest.com

C162/C163/C164 OVERVIEW

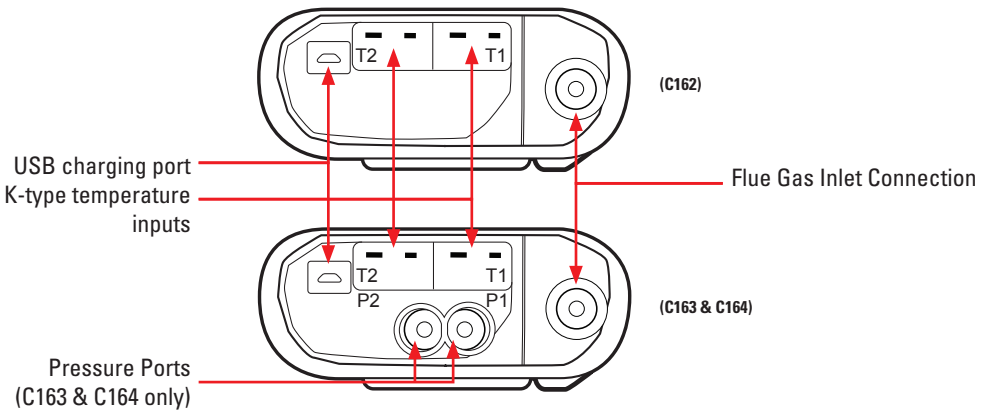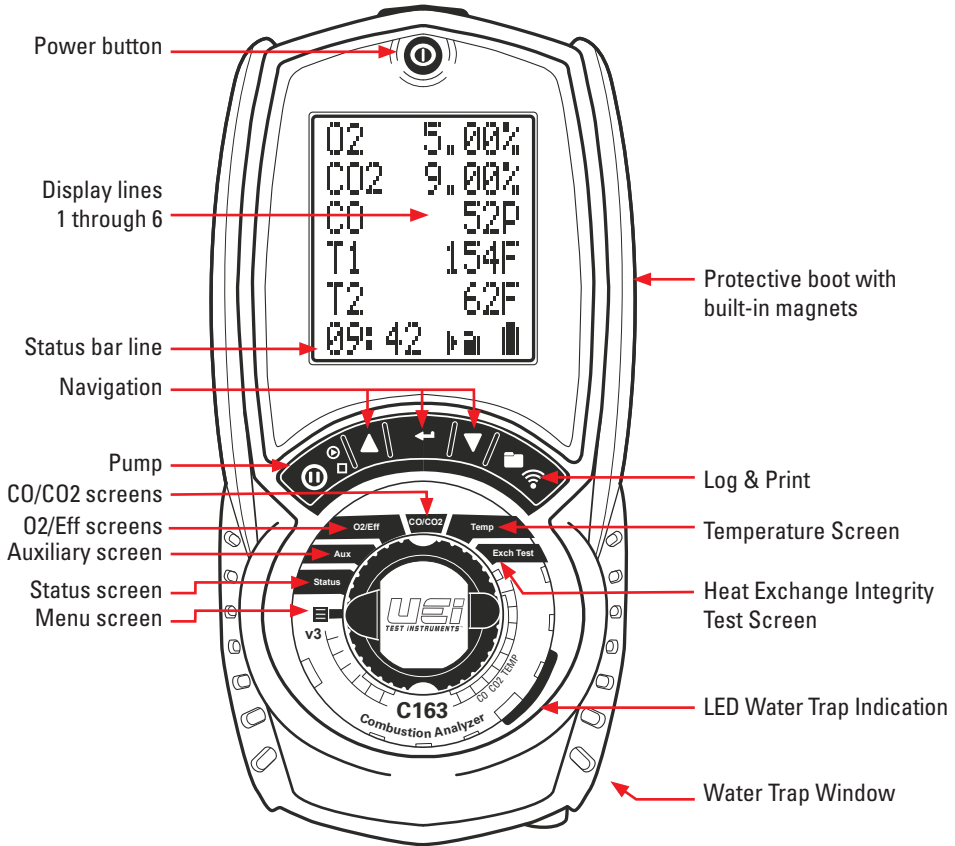


MENU SCREEN - C163 START UP



Press  "Power" Button for 2 seconds. The analyzer will perform a 60 second purge. This should be done in fresh air.

Rotate Selector Dial to **MENU** to set up or customize your settings.

Selected parameter are centered, highlighted with arrow icons on either side.


Use  and  buttons to scroll menu options,

Press  to select and edit a parameter.

Press  and  buttons to change contents of a field.

Press  button to scroll fields.

Press  to enter content and move to next field.

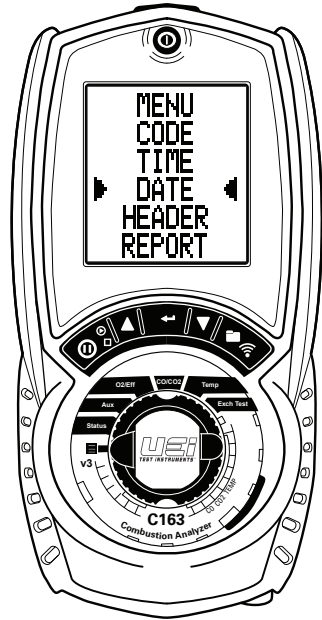

STATUS SCREEN



Rotate Selector Dial to **STATUS** to view parameters.

Selected Fuel

Ti = Ambient Temperature

ATM = Atmospheric Pressure (measured in mbar)

CAL = Days remaining until calibration

Press  and  buttons to scroll Status Bar options.

Time, Pump Status, Battery Status

Fuel Type

Date


Change Fuel Type in STATUS SCREEN

Press  and  buttons to the currently selected fuel.

Press and Hold  button until arrows indicate fuel edit mode is activated.

The  and  to scroll fuel types.


Press  to select desired fuel.

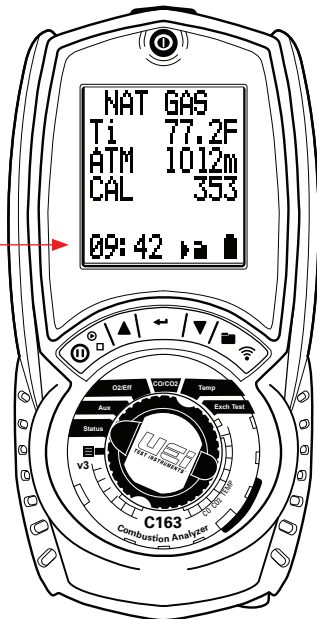


BEFORE TESTING

CHECKLIST

- Clean particle filter
- Water trap and probe line are free of condensate
- All hose and thermocouple connections are properly secured
- Water trap is fitted correctly
- Power on and zero
- Flue gas probe is sampling ambient FRESH air

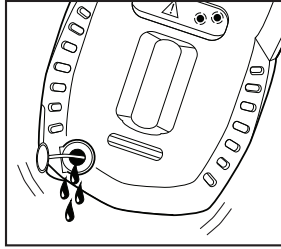


Remove the rubber boot and red drain plug. Allow the water to drain out. Re-insert the rubber plug and replace boot cover.

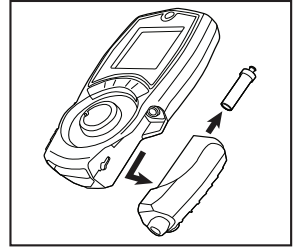


Remove protective rubber boot. Remove water trap from analyzer. Remove particle filter from water trap and replace with new one. Reattach trap and boot.


COMBUSTION ANALYSIS

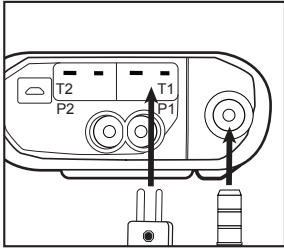

Insert flue probe into combustion input. Insert K-type temperature probe into input T1.

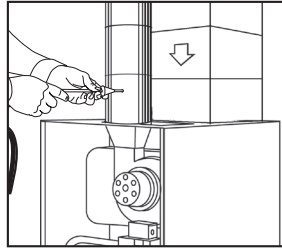


Insert flue probe into stack. Adjust cone so the probe tip is approximately at the center of the stack.

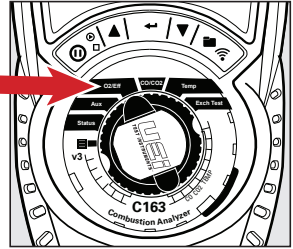


Rotate function rotary dial to O2/Eff for Test Screen 1 parameters.


NOTE: If there is no hole, check with service and installation instructions of appliance for best testing method or check with your local authority on best practice

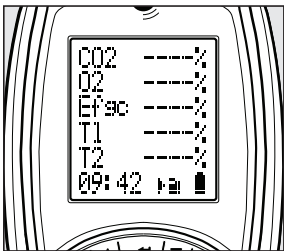

O2/Eff displays CO₂, O₂, Efficiency, Flue temperature, Inlet temperature.

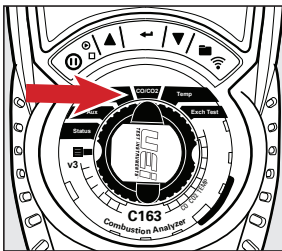


Rotate the function rotary dial to CO/CO₂ for Test Screen 2 parameters.

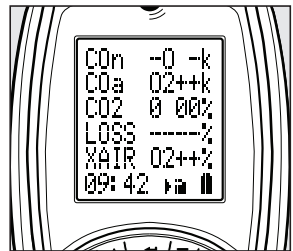


CO/CO₂ displays CO (ppm), CO₂, Losses calculated, Excess air %. Make any adjustments needed for proper Combustion and wait for analyzer to display change in readings. (Repeat as necessary).


CHANGE FUEL TYPE

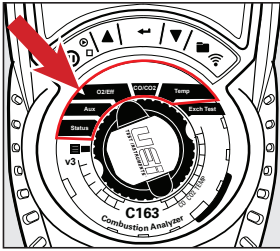

Rotate the dial to either STATUS, AUX, O2/Eff, CO/CO2 or Temp setting.

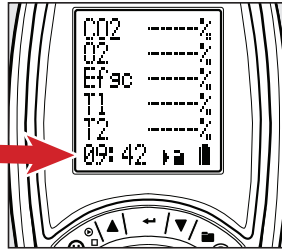


Press \blacktriangledown button until the Fuel Type displays on the Status Bar.
Press and Hold \leftarrow until two arrow icons display.

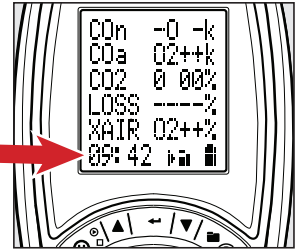


Press \blacktriangle and \blacktriangledown buttons to scroll fuel selections.
Press \leftarrow to select fuel.


AUXILIARY SCREEN

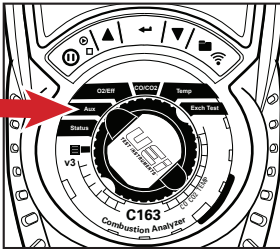

When performing a combustion Test, Rotate function rotary dial to AUX to view the Auxiliary Test Screen's custom parameters.

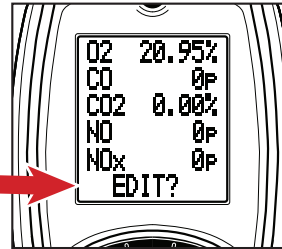

AUX displays 5 lines of editable parameters. To edit line values Press \blacktriangledown button until **Edit?** displays on the Status Bar.
Press and Hold \leftarrow until the Status Bar reads **LINE 1**.

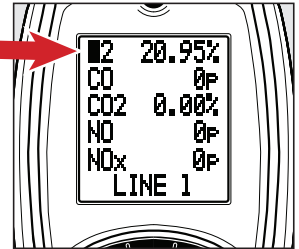


Press \blacktriangle and \blacktriangledown buttons to scroll parameter selections.
Press \leftarrow to select a parameter and advance to the next Line.
Continue until cursor is back to Status Bar to exit.


The AUX screen allows you to assign any of the following parameters on any display line.

O2, CO, Display Fuel Type, CAL, XAIR, LOSS, Efgc, ATM, T1, Δ T, T2, T1, CO2, COa, or COn. Pressure(C163 and !64 only). NOX and No (C164 only)


TEMPERATURE TEST

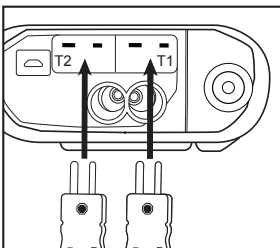

Insert K-type temperature probes into input T1 and T2.

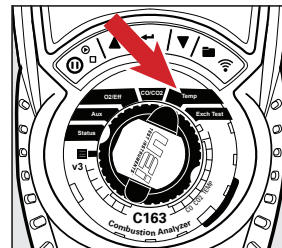


Rotate function rotary dial to TEMP for Temperature Test Screen.

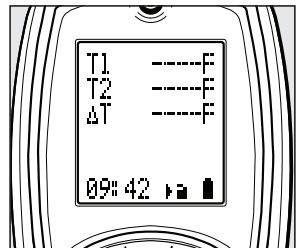




TEMP displays T1, T2 and Differential Temperature. (Pressure C163 C164 only)

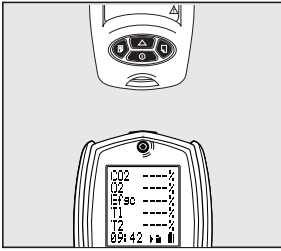
PRINTING & LOGGING

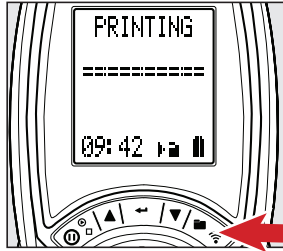


To Print: Align printer (sold separately) above Analyzer.




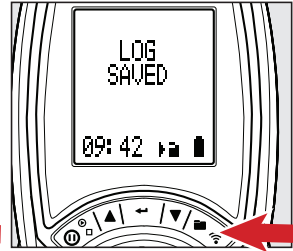

During testing, Press  to start printing.
Press  again to abort.





To Log: During testing, Press and Hold  to log a report.
To view these Logs, see **View Saved Logs** section.

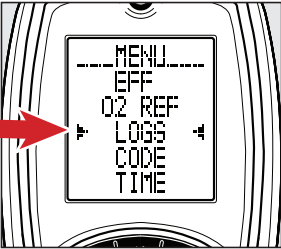
VIEW SAVED LOGS



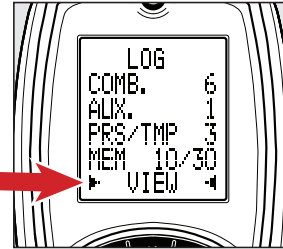


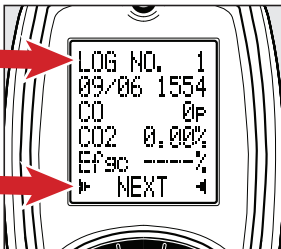
Rotate the dial to MENU.
Press  button until the LOGS is selected between two arrow icons. Press  to select.



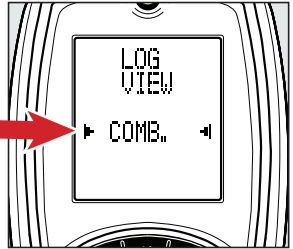


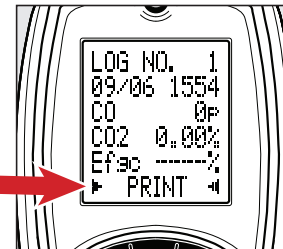
Screen displays all saved LOGS.
With VIEW selected in the Status Bar, Press  to select.






Press  and  buttons to scroll Test Report categories.
Press  to select a category.






Line 1 displays the LOG number on screen.
To view another LOG, Press  and  buttons to NEXT.
Press  to advance to next log.
Repeat until you reach desired LOG.




To print the LOG, Press  and  buttons until PRINT is selected between two arrow icons. Press  to select to start printing.



To EXIT, Press  and  buttons until EXIT is selected between two arrow icons. Press  to EXIT screen.
Repeat until return to MENU screen.

POST TESTING

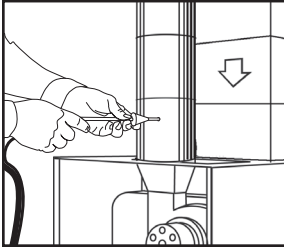

Remove the probe from the flue and allow analyzer to purge with fresh air until readings return to zero. O₂ to 20.9% and CO below 20 ppm

CAUTION: probe tip will be HOT.

POWERING OFF

When you power off the Analyzer, there is a 10 second purge.




CAUTION

Make sure you do not exceed the analyzer's operating specifications.

- Do not exceed the flue probes maximum temperature (1112°F)
- Do not exceed the analyzer's internal temperature range 112°F (50°C)
- Do not put the analyzer on a hot surface
- Do not exceed the water trap's level
- Do not let the particle filter become dirty and blocked

BATTERIES

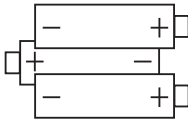

The analyzer is fitted with 3 (AA) size rechargeable batteries. Observe correct polarity when replacing.

Always check operation immediately after battery replacement.

Do not leave batteries in unit for extended periods of non-use.



WARNING

Do not recharge with Alkaline batteries fitted. Alkaline batteries are not rechargeable. Attempting to recharge alkaline batteries may result in product damage and create a fire risk.

Time and Date will need to be reset after changing batteries.

Always dispose batteries using approved disposal methods that protect the environment.



***Download the full
Owners Manual at
UEiTEST.COM or
SCAN THIS CODE***

WARRANTY

The C163 combustion analyzer is warranted for one year including sensors. If within the warranty period your instrument should become inoperative from such defects, the unit will be repaired or replaced at UEi's option. This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect or improper maintenance (calibration). Batteries and consequential damage resulting from failed batteries are not covered by warranty. Any implied warranties, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the express warranty. UEi shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim or claims for such damage, expenses or economic loss. A purchase receipt or other proof of original purchase date will be required before warranty repairs will be rendered. Instruments out of warranty will be repaired (when repairable) for a service charge. Warranty only covers hardware and does not extend to software applications or accessories. Contact UEi for specific warranty and service information.

UEi Test Instruments • 1-800-547-5740 • info@ueitest.com

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ANNUAL RECERTIFICATION SERVICES



Complete Care for Your Combustion Analyzer

When you:

***Request Recertification or Service Online
Within 1 Year of Purchase or Last Service***

BACKED BY



UEi will:

10 Year Warranty: All UEi combustion analyzers have a standard 1-year warranty. Each recertification extends the warranty for 1 more year for up to **10 years** from the date of purchase.



Contractors who book recertification of a C160 series analyzer at www.ueitest.com/service within 12 months from either the date of purchase or the date of the last recertification will receive reduced service pricing that lowers the cost of ownership and 2 additional benefits:



Same Day Service: All qualifying analyzers received for recertification through UEi Service+ are returned on the same business day.*



Free Shipping: UEi Service+ offers free shipping both to and from our service center. When customers book their recertification, they receive a prepaid UPS Ground shipping label.

*Analyzers that include the additional NO (Nitric Oxide) sensor requires 48-hour turnaround.

Register Online

Registering you analyzer online is quick and easy. Just log in or setup an account, it only takes a couple of minutes. Once logged in you can register you analyzer by providing some product information and uploading a proof-of-purchase. When it's time to request recertification, just log into your account, select the analyzer, select the service and place your order.

WWW.UEITEST.COM

**USA 1.800.547.5740
CANADA 1.877.475.0648**